
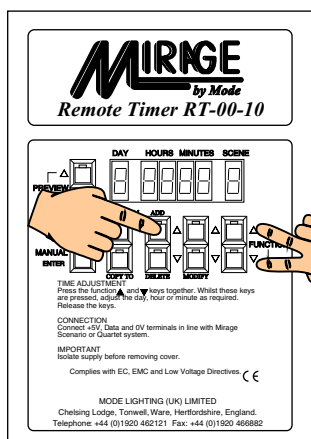


# MODE LIGHTING (UK)

## Programming the Mirage Remote Timer.

To set the time, hold down the function arrow keys and using the buttons below each display (DAY, HOURS, MINUTES) advance the timer to the correct time and day. Release the keys. The time is now set.

1. To enter programming, hold down the function arrow keys and type down-up-down-up using the preview keys. Release the keys. You are now in Programming Mode. The function LEDs light to indicate this.

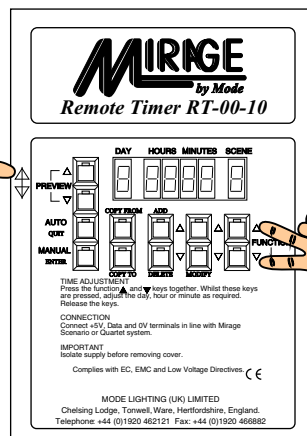


2. To ADD a scene change, hold down the function arrow keys and press the ADD button. Release the keys. The ADD function LED lights to indicate the mode selected.

Using the buttons below each display, advance the display to the required day, time and scene required. Press the enter button.

Repeat above procedure for all time changes required for that day.

3. To Copy the settings from one day to another, hold down the function arrow keys and press the COPY FROM button. Release the keys. The COPY FROM function LED lights to indicate the mode selected. Using the buttons below the DAY display scroll to the DAY you wish to copy and press ENTER.

Hold down the function arrow keys and press the COPY TO button. Release the keys. The COPY TO function LED lights to indicate the mode selected. Using the buttons below the DAY display scroll to the DAY you wish to copy the information to and press ENTER.

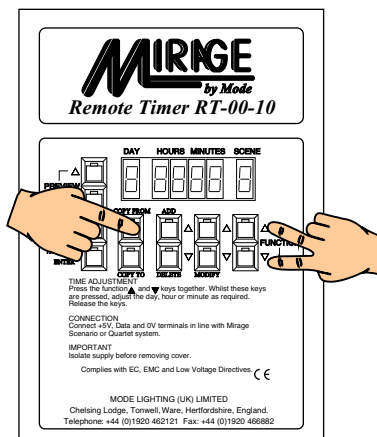

4. To MODIFY a setting, hold down the function arrow keys and press the MODIFY button. Release the keys. The MODIFY function LED lights to indicate the mode selected. Using the preview buttons scroll to the time and scene change you wish to MODIFY. Using the buttons below the displays adjust the setting as required. Press ENTER. The change has now been Modified.

5. To DELETE a setting, hold down the function arrow keys and press the DELETE button. Release the keys. The DELETE function LED lights to indicate the mode selected. Using the preview buttons scroll to the time and scene change you wish to DELETE. Press ENTER. The scene change has now been deleted.

6. To Exit programming, hold down the function arrow keys and press the EXIT button. Release the keys. The Timer will now return to normal operation and the display will show the last change made by the timer.

7. Pressing the Manual button on the timer will turn the Automatic function off. The timer will still run through its programs but will not adjust the lighting. Pressing the AUTO button will resume timed operation of the RT-00-10.