


1 4 x 3A [Impulse Dimming]

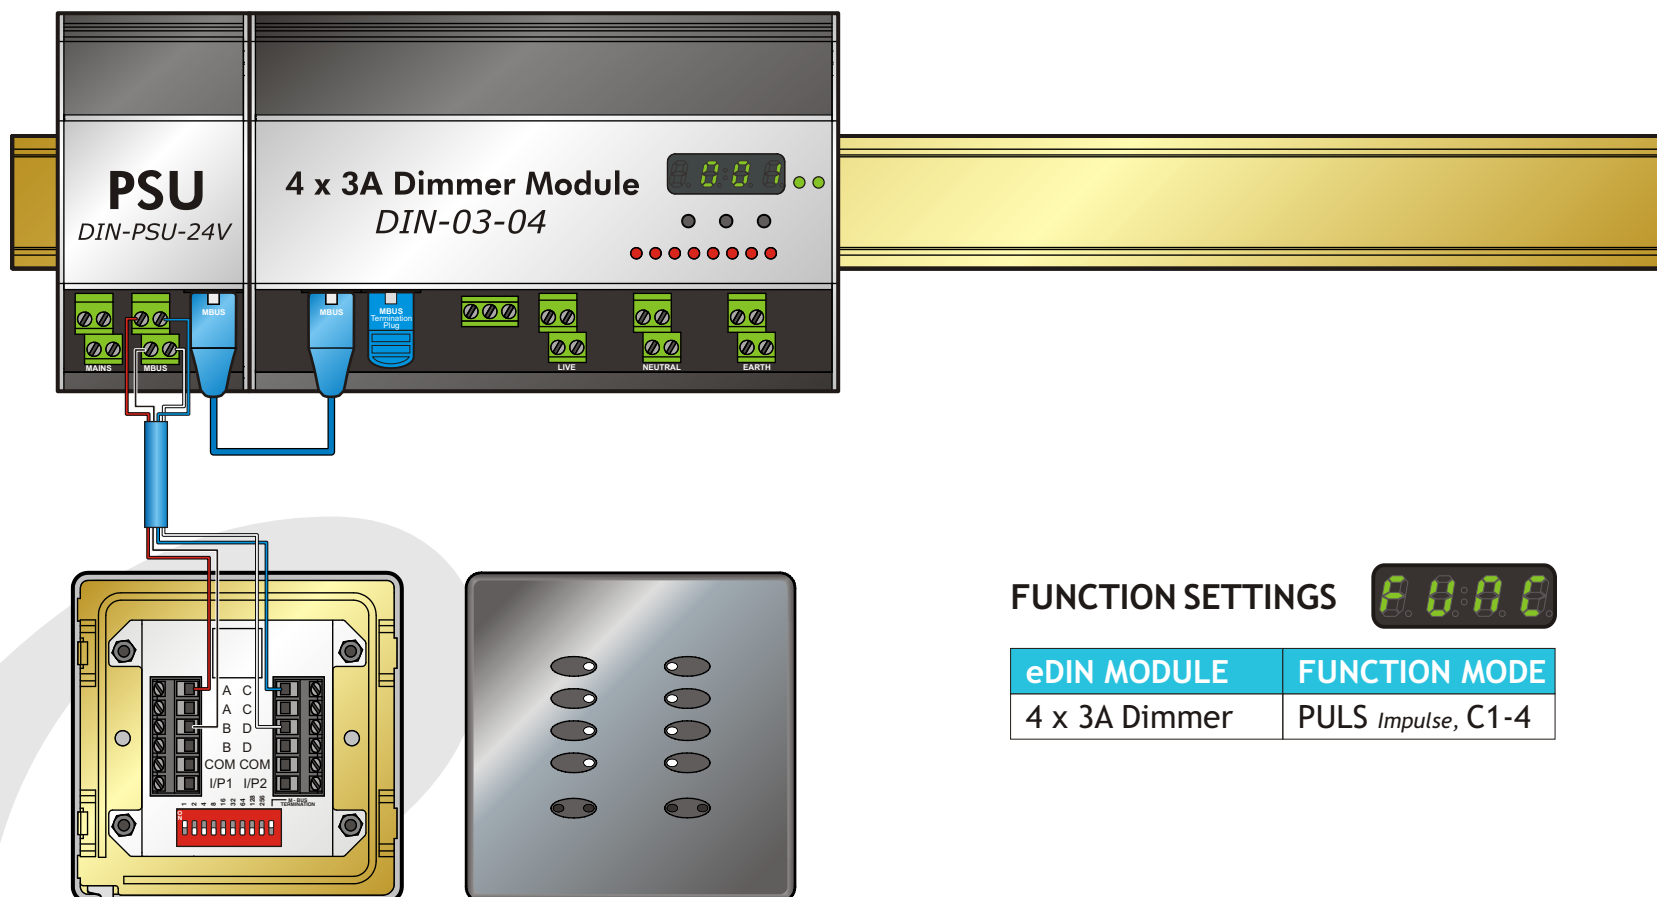

FUNCTION SETTINGS




eDIN MODULE	FUNCTION MODE
4 x 3A Dimmer	PULS <i>Impulse</i> , C1-4

Please Note: For full electrical wiring instructions please see installation guides included with each module.



2 8 x 2A [Impulse Dimming]

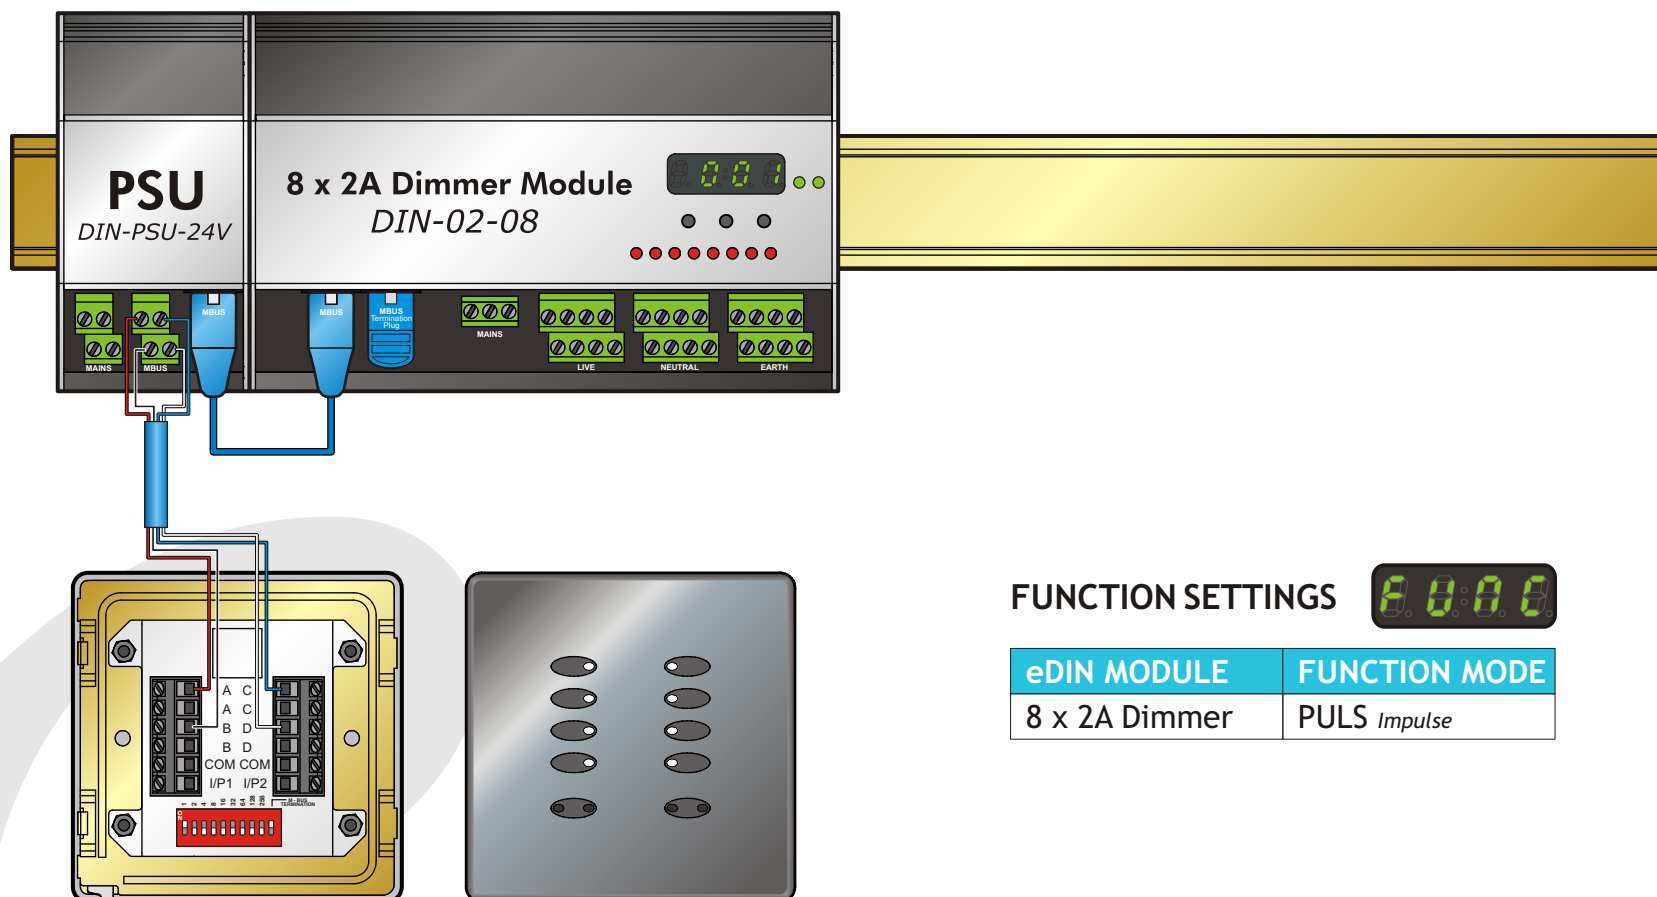

FUNCTION SETTINGS




eDIN MODULE	FUNCTION MODE
8 x 2A Dimmer	PULS <i>Impulse</i>

Please Note: For full electrical wiring instructions please see installation guides included with each module.




3 8 x 3A [Impulse Dimming]

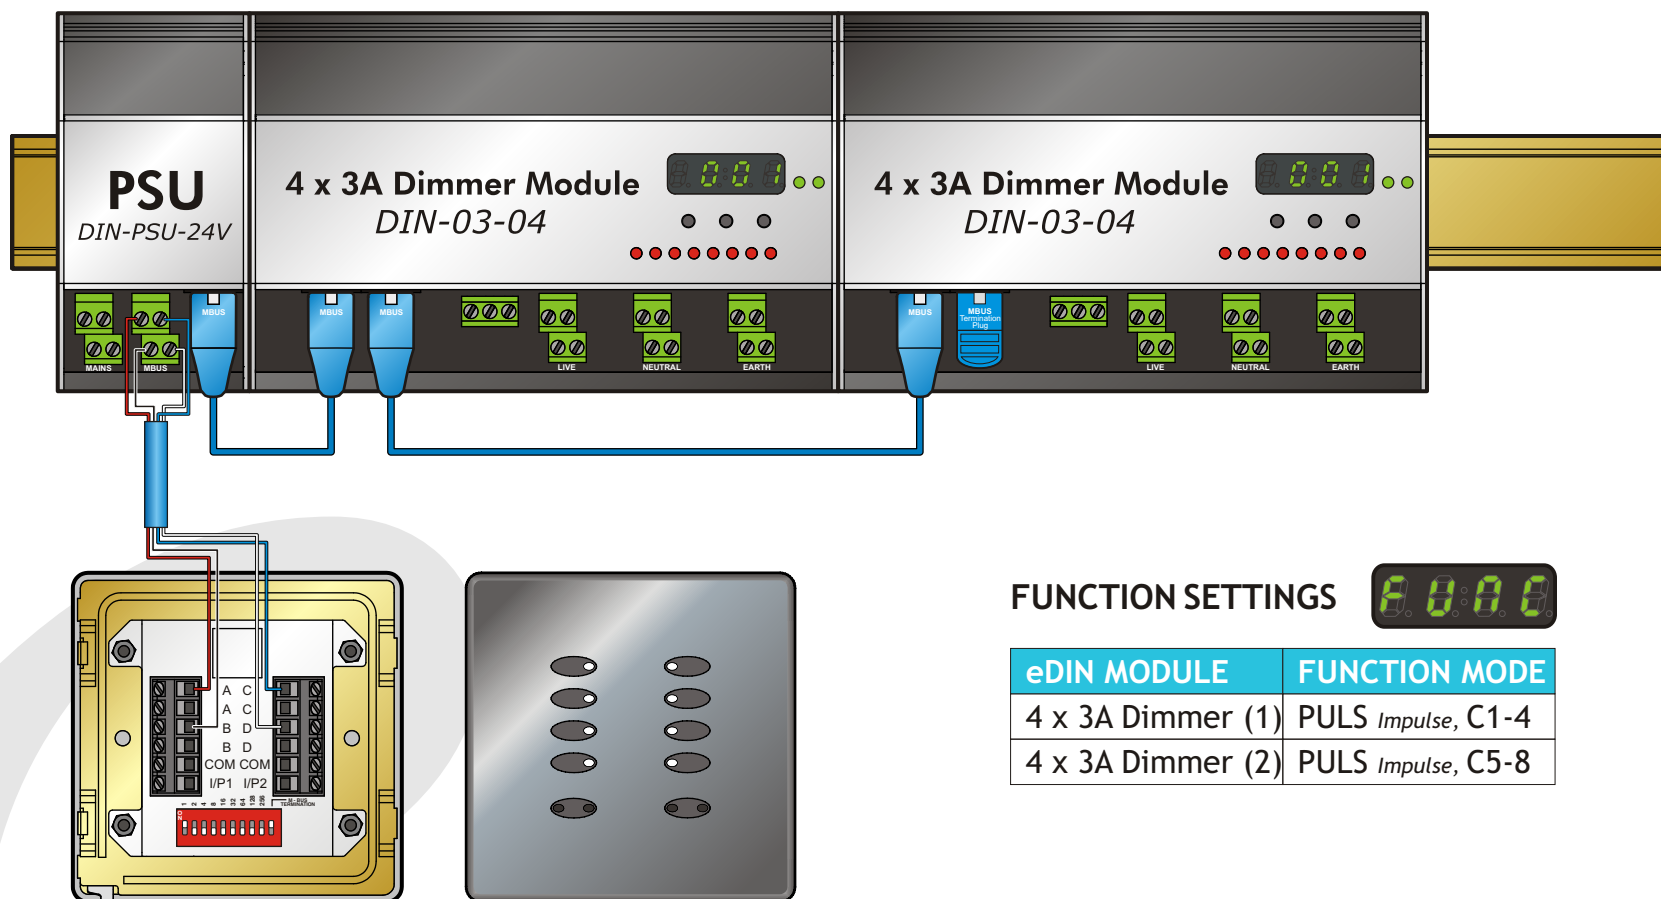

Please Note: For full electrical wiring instructions please see installation guides included with each module.



4 8 x 2A with 8 x matched 1-10V Outputs [Impulse Dimming]

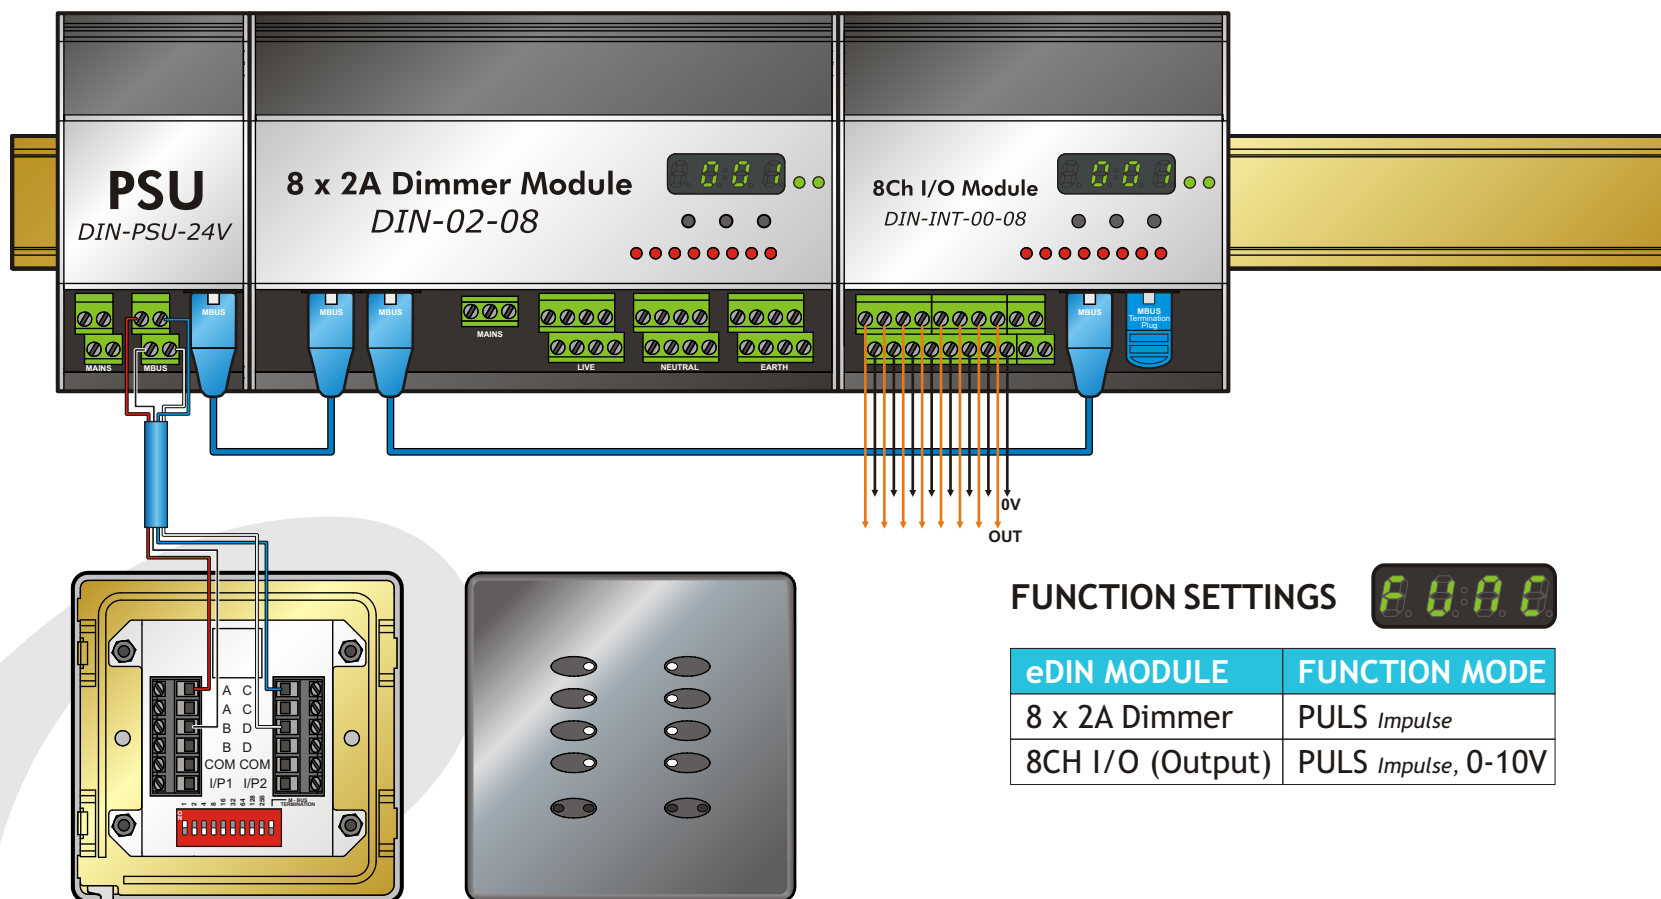


FUNCTION SETTINGS



eDIN MODULE	FUNCTION MODE
8 x 2A Dimmer	PULS <i>Impulse</i>
8CH I/O (Output)	PULS <i>Impulse, 0-10V</i>

Please Note: For full electrical wiring instructions please see installation guides included with each module.

5 4 x 3A with 4 x matched SELV DSI Outputs [Impulse Dimming] eDIN

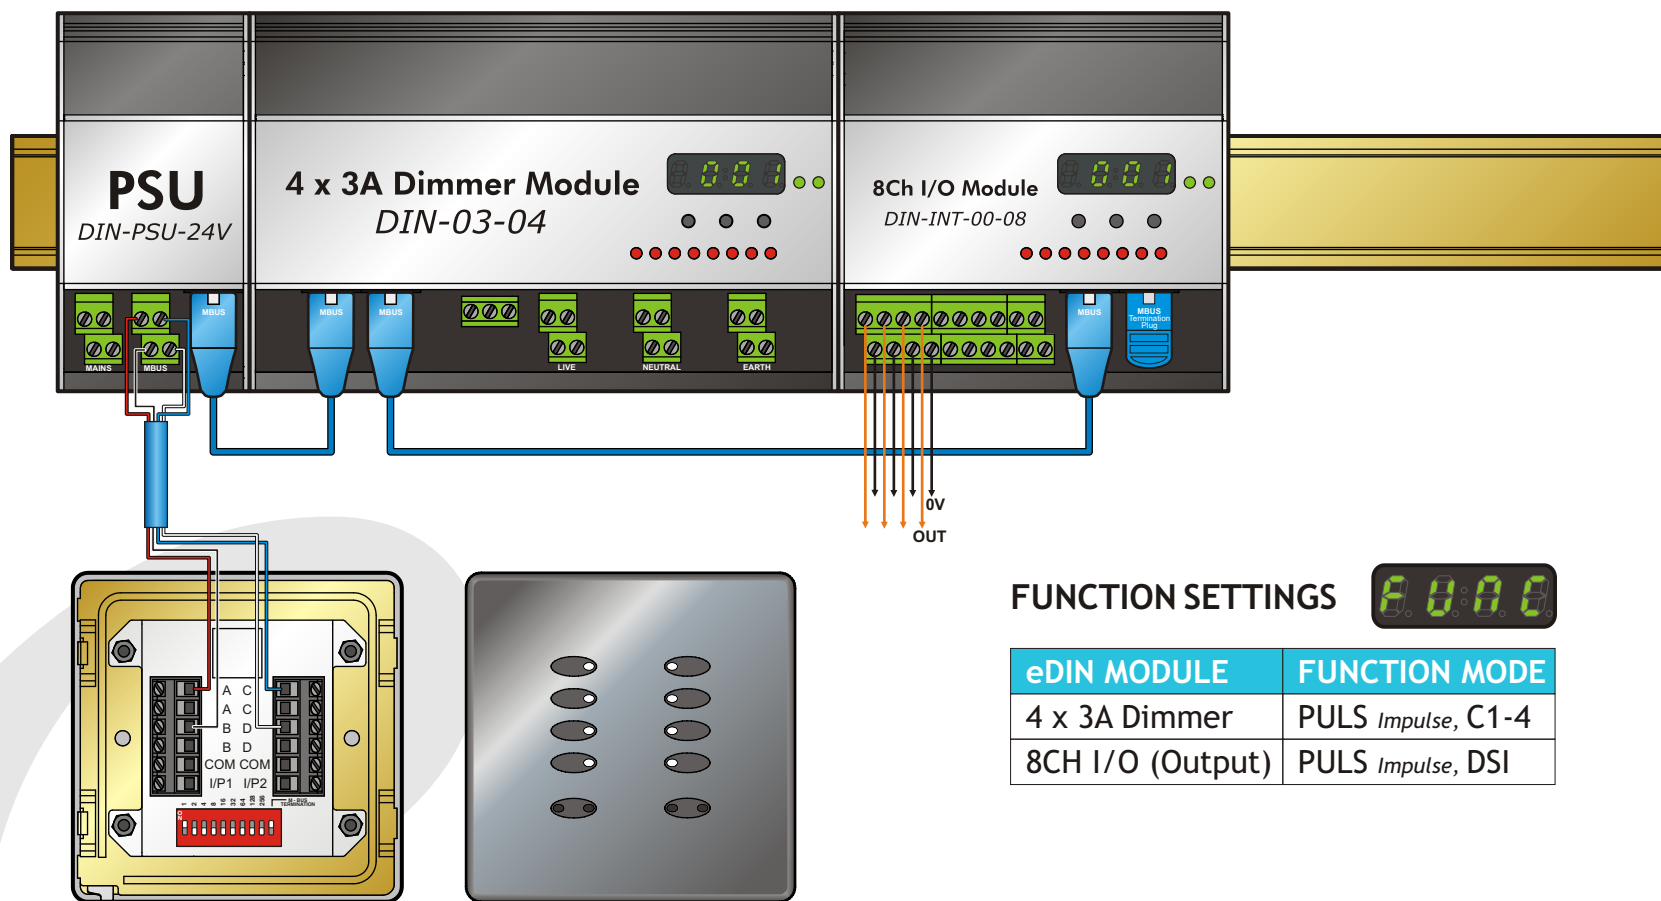


FUNCTION SETTINGS

eDIN MODULE	FUNCTION MODE
4 x 3A Dimmer	PULS <i>Impulse</i> , C1-4
8CH I/O (Output)	PULS <i>Impulse</i> , DSI

Please Note: For full electrical wiring instructions please see installation guides included with each module.

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.

6 4 x 3A & 4 x matched SELV 1-10V Outputs [Impulse Dimming] **eDIN**

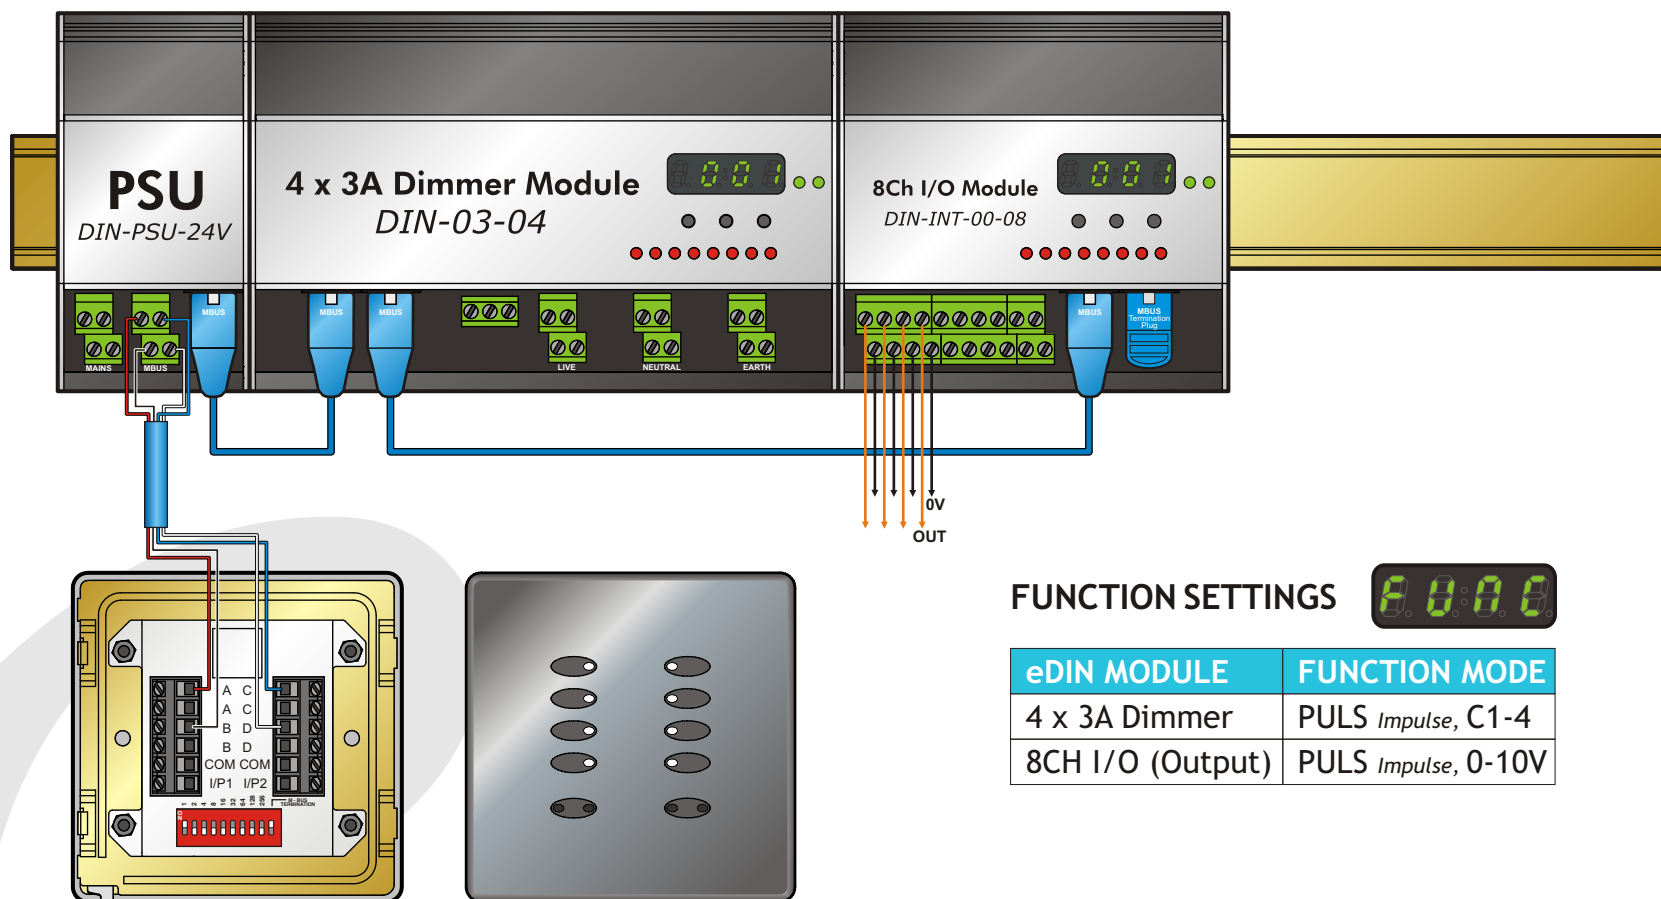

FUNCTION SETTINGS




eDIN MODULE	FUNCTION MODE
4 x 3A Dimmer	PULS <i>Impulse</i> , C1-4
8CH I/O (Output)	PULS <i>Impulse</i> , 0-10V

Please Note: For full electrical wiring instructions please see installation guides included with each module.

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.

7 4 x 3A with 4 x SELV 1-10V with Relay Switching [Impulse Dimming] eDIN

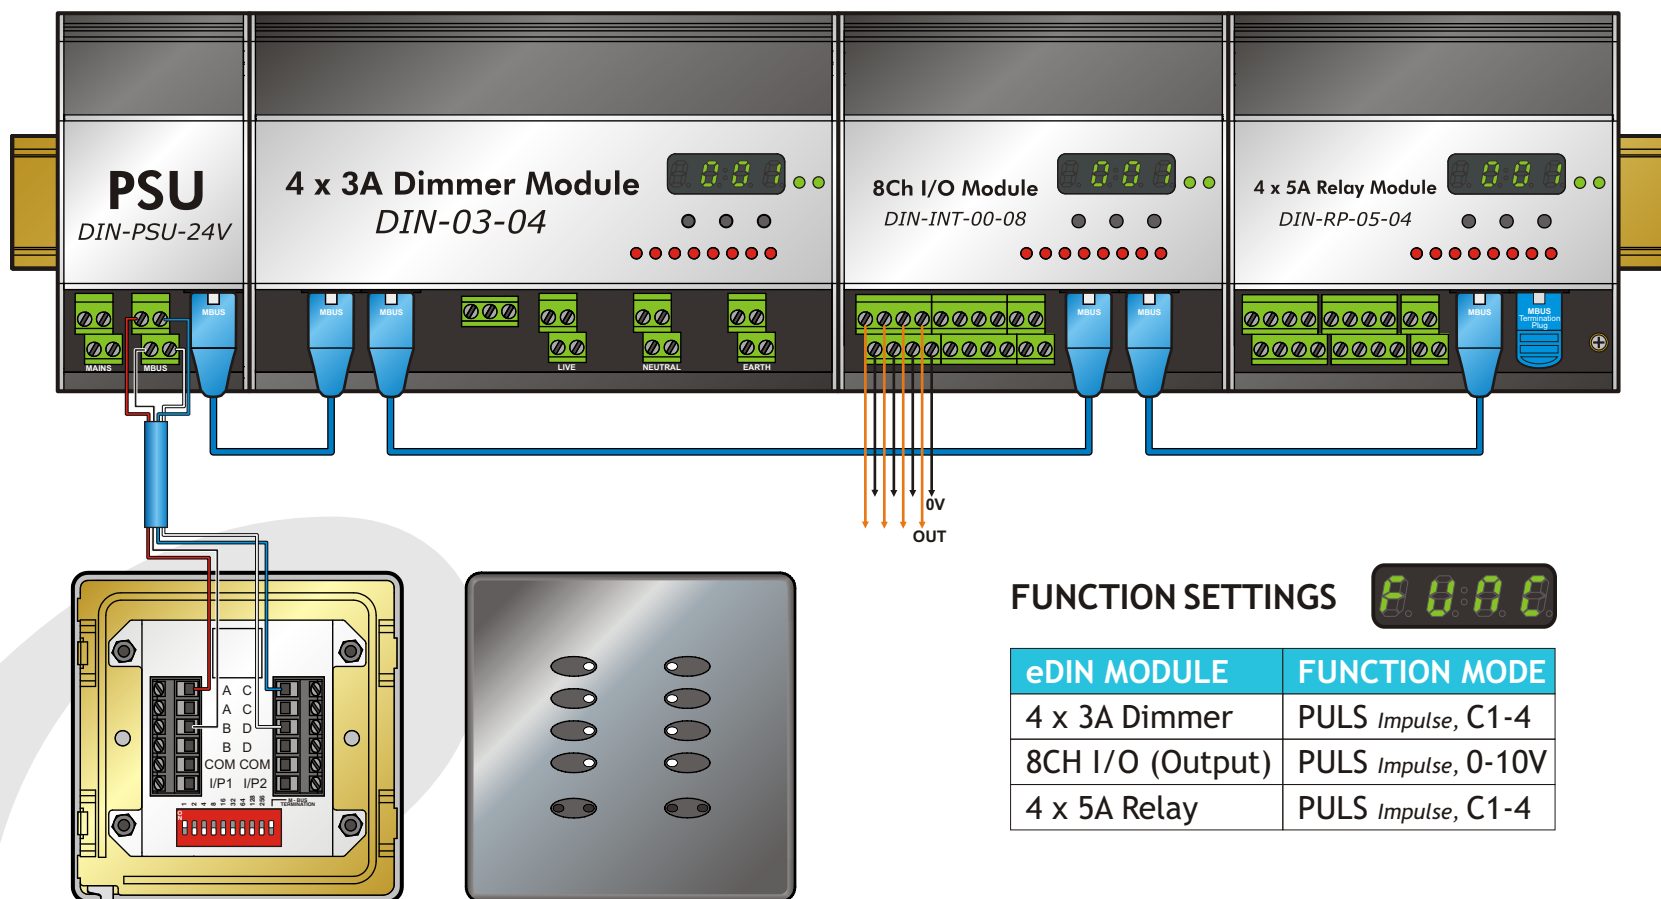

Please Note: For full electrical wiring instructions please see installation guides included with each module.


Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.



Please Note: For full electrical wiring instructions please see installation guides included with each module.

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.

9 8 x SELV 1-10V Outputs [Impulse Dimming]

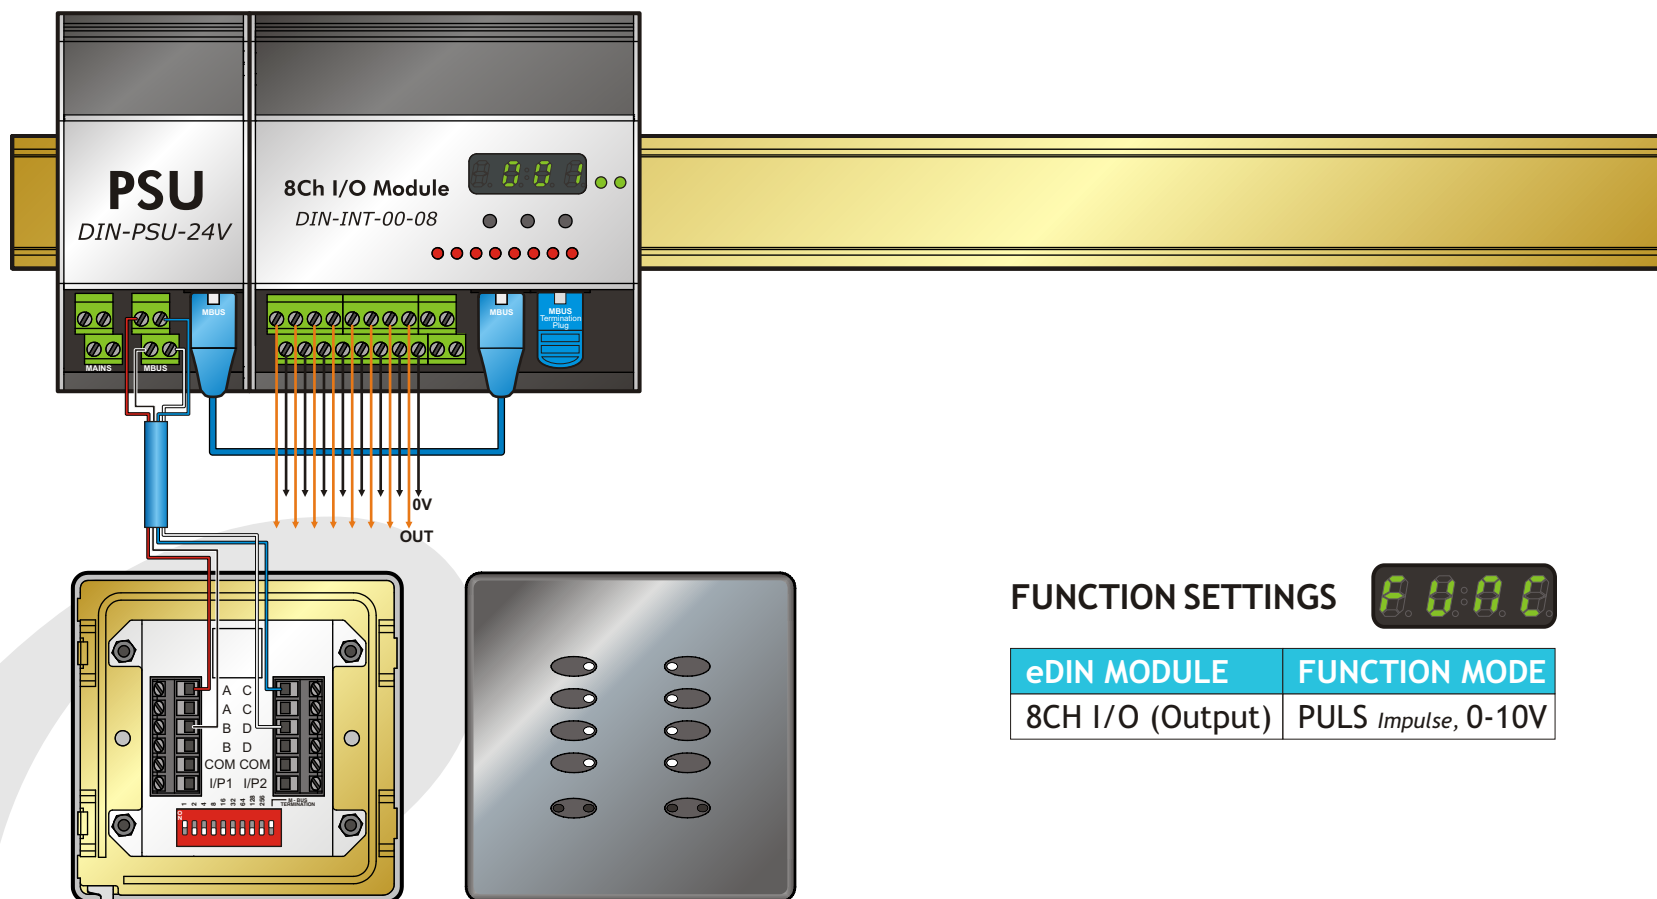

FUNCTION SETTINGS



eDIN MODULE	FUNCTION MODE
8CH I/O (Output)	PULS <i>Impulse</i> , 0-10V

Please Note: For full electrical wiring instructions please see installation guides included with each module.



Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.


© Mode Lighting 2009



Please Note: For full electrical wiring instructions please see installation guides included with each module.

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.

11 4 x SELV DSI with 4 x SELV 1-10V Outputs [Impulse Dimming] eDIN

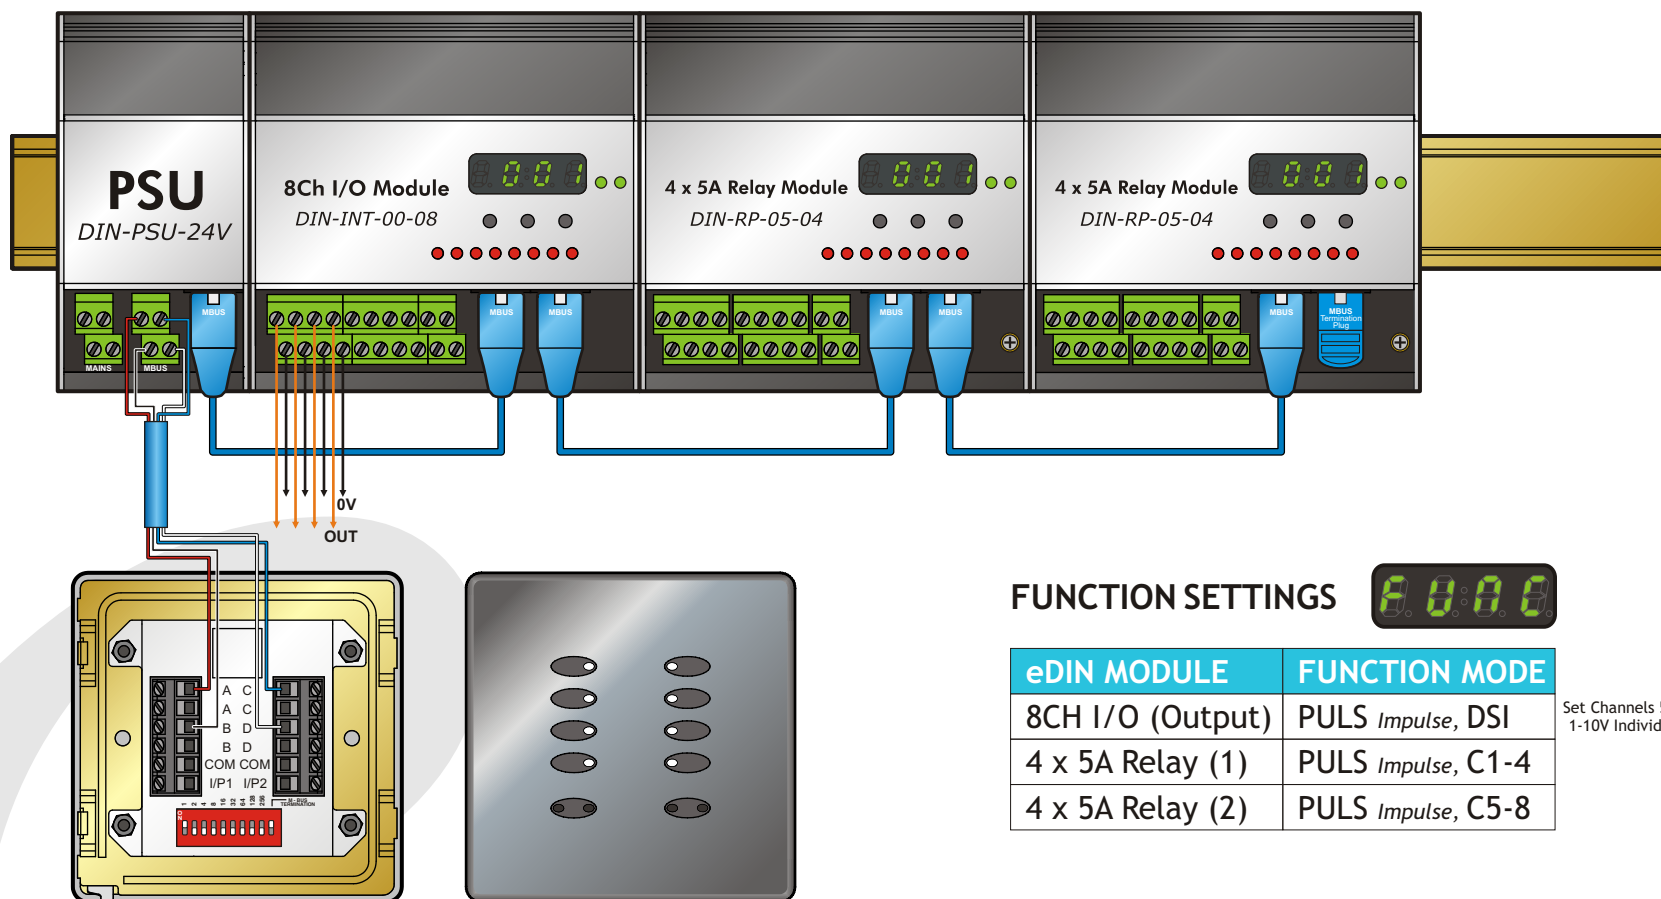

FUNCTION SETTINGS



eDIN MODULE	FUNCTION MODE
8CH I/O (Output)	PULS <i>Impulse</i> , DSI
4 x 5A Relay (1)	PULS <i>Impulse</i> , C1-4
4 x 5A Relay (2)	PULS <i>Impulse</i> , C5-8

Set Channels 5-8 to 1-10V Individually

Please Note: For full electrical wiring instructions please see installation guides included with each module.


MODE
LIGHTING

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.

© Mode Lighting 2009

12

4 x SELV DSI & 4 x SELV 1-10V with Relay Switching [Impulse Dimming]

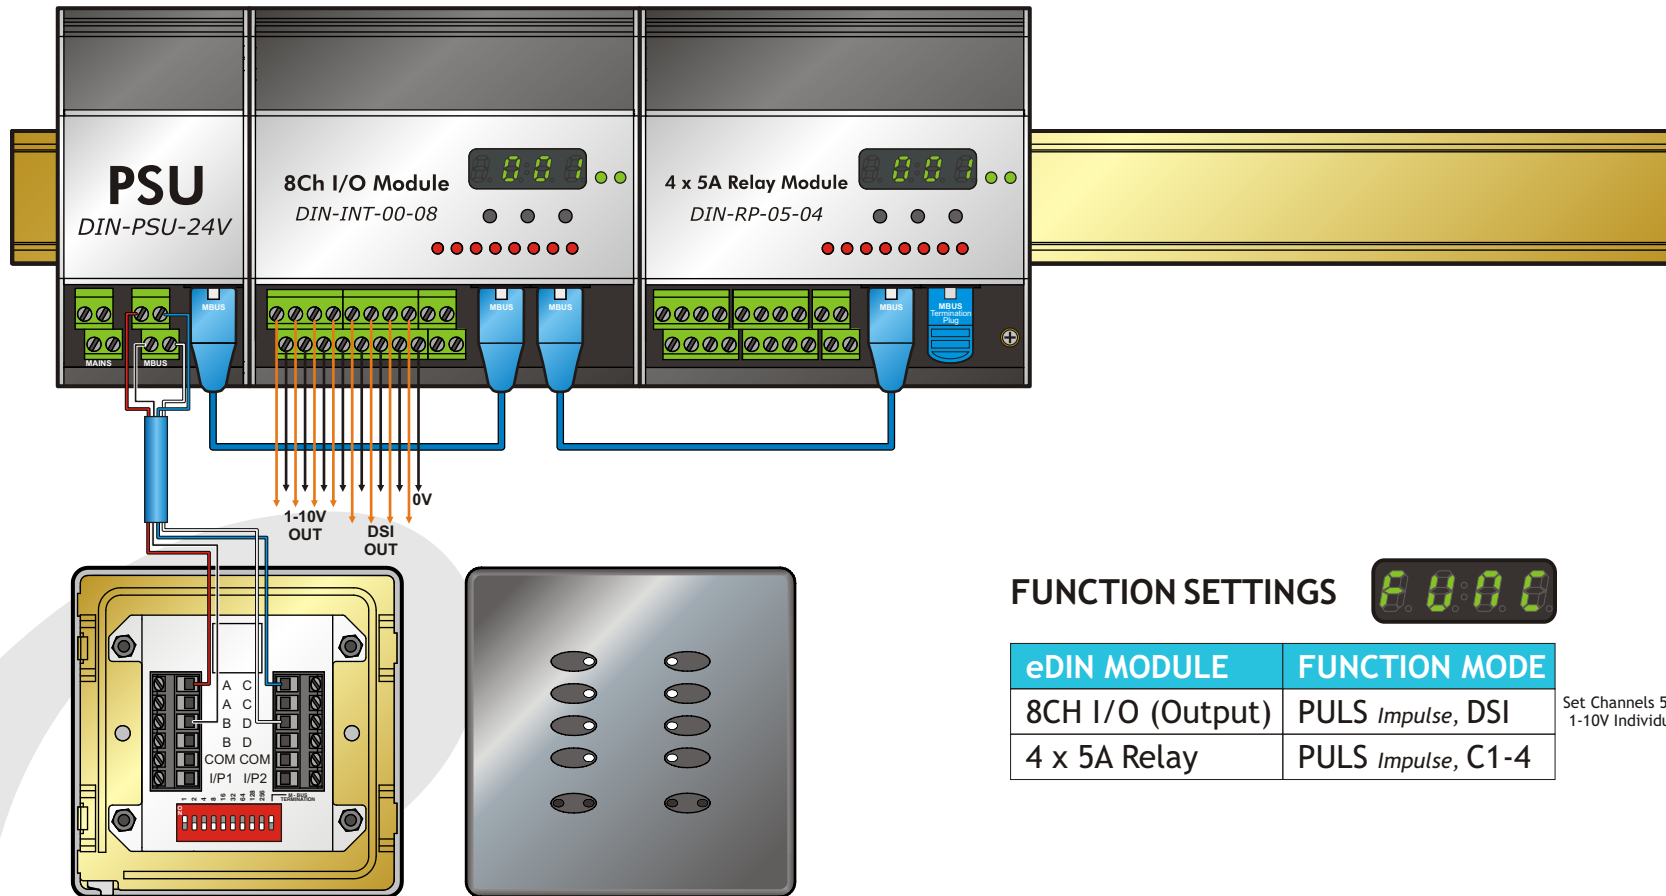

FUNCTION SETTINGS



eDIN MODULE	FUNCTION MODE
8CH I/O (Output)	PULS <i>Impulse</i> , DSI
4 x 5A Relay	PULS <i>Impulse</i> , C1-4

Set Channels 5-8 to 1-10V Individually

Please Note: For full electrical wiring instructions please see installation guides included with each module.

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.





Please Note: For full electrical wiring instructions please see installation guides included with each module.

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.