


14 4 x 3A [Scene Setting]

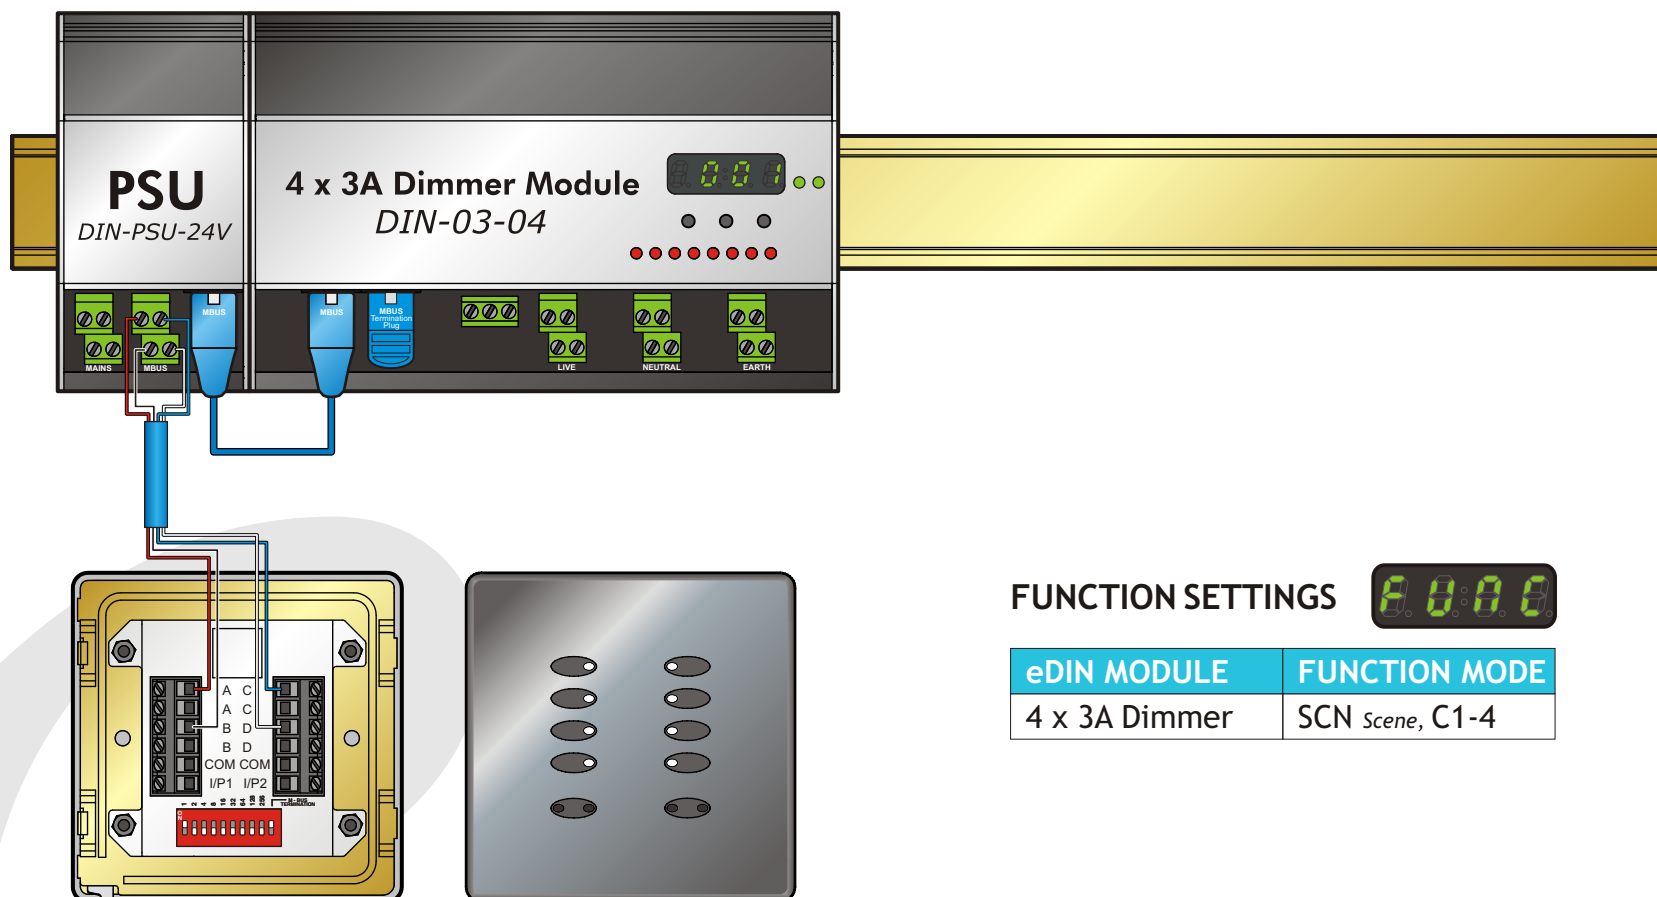


FUNCTION SETTINGS



eDIN MODULE	FUNCTION MODE
4 x 3A Dimmer	SCN <i>Scene</i> , C1-4


Please Note: For full electrical wiring instructions please see installation guides included with each module.



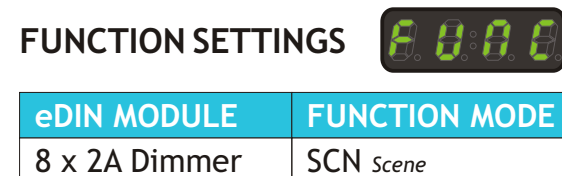


MODE LIGHTING

16 8 x 3A [Scene Setting]

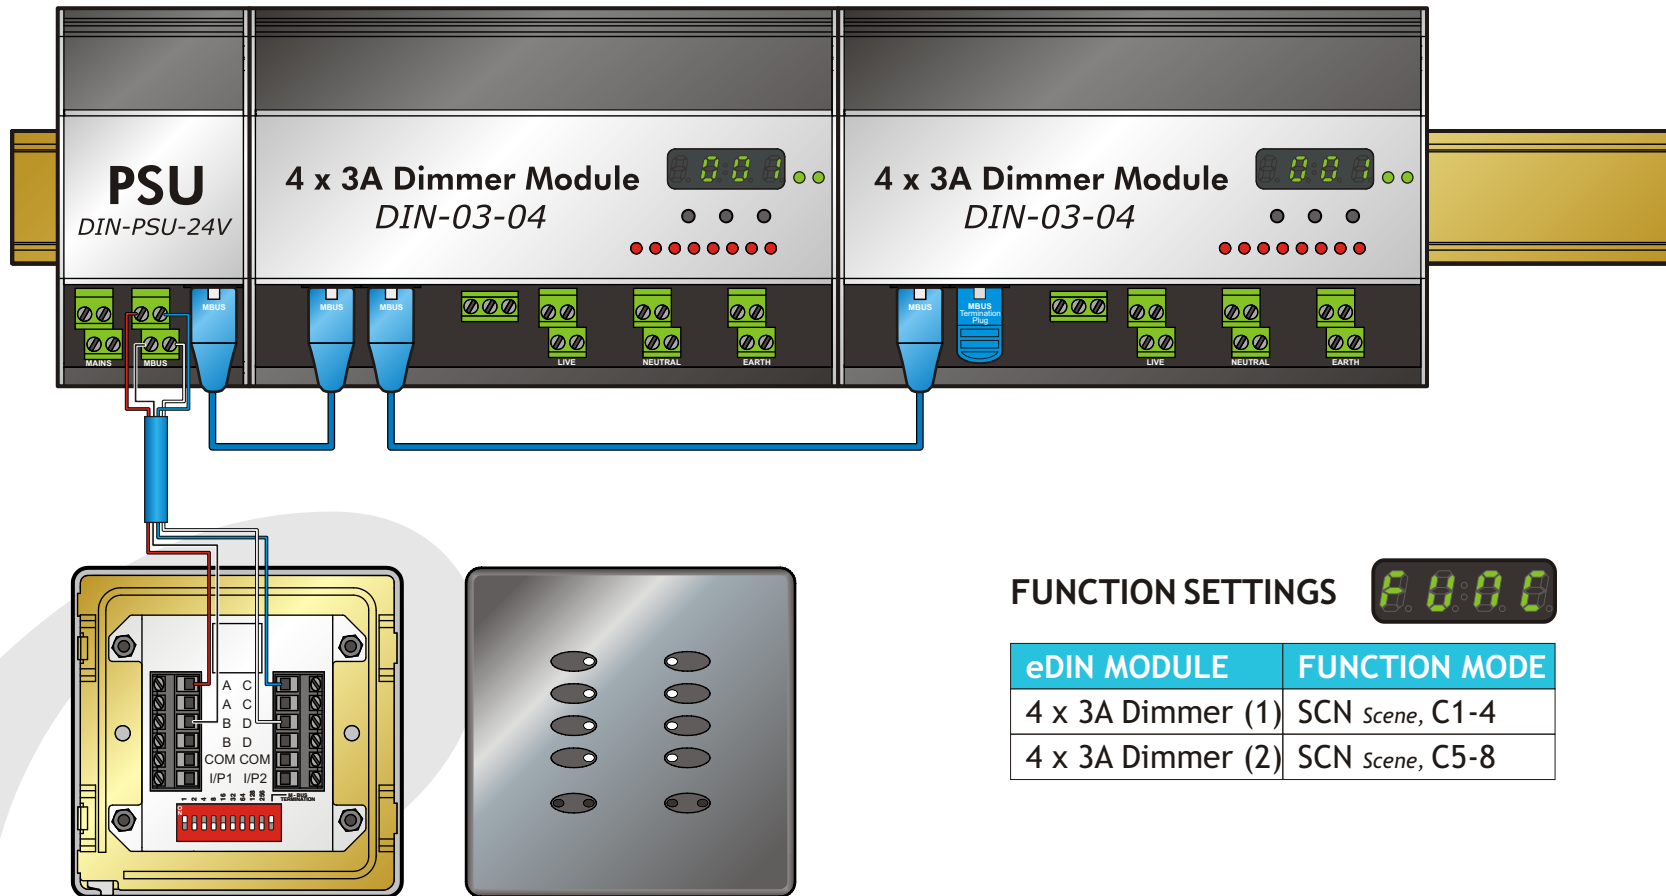

Please Note: For full electrical wiring instructions please see installation guides included with each module.

17 8 x 2A with 8 x SELV 1-10V Outputs [Scene Setting]

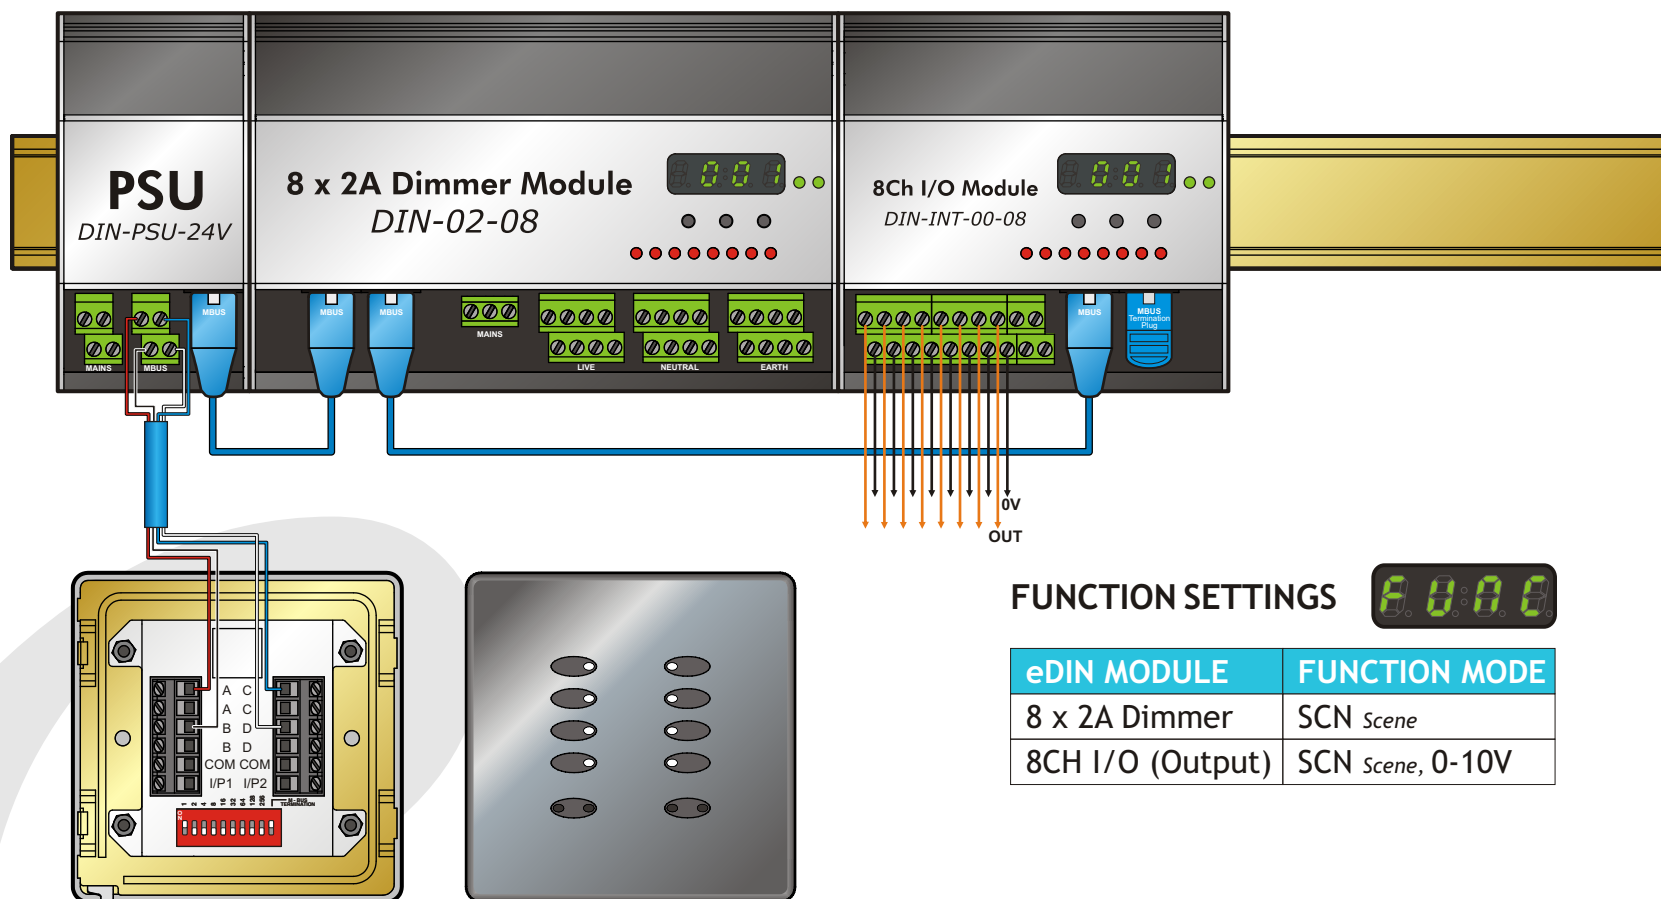

FUNCTION SETTINGS




eDIN MODULE	FUNCTION MODE
8 x 2A Dimmer	SCN Scene
8CH I/O (Output)	SCN Scene, 0-10V

Please Note: For full electrical wiring instructions please see installation guides included with each module.

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.

18


4 x 3A with 4 x SELV DSI Outputs [Scene Setting]

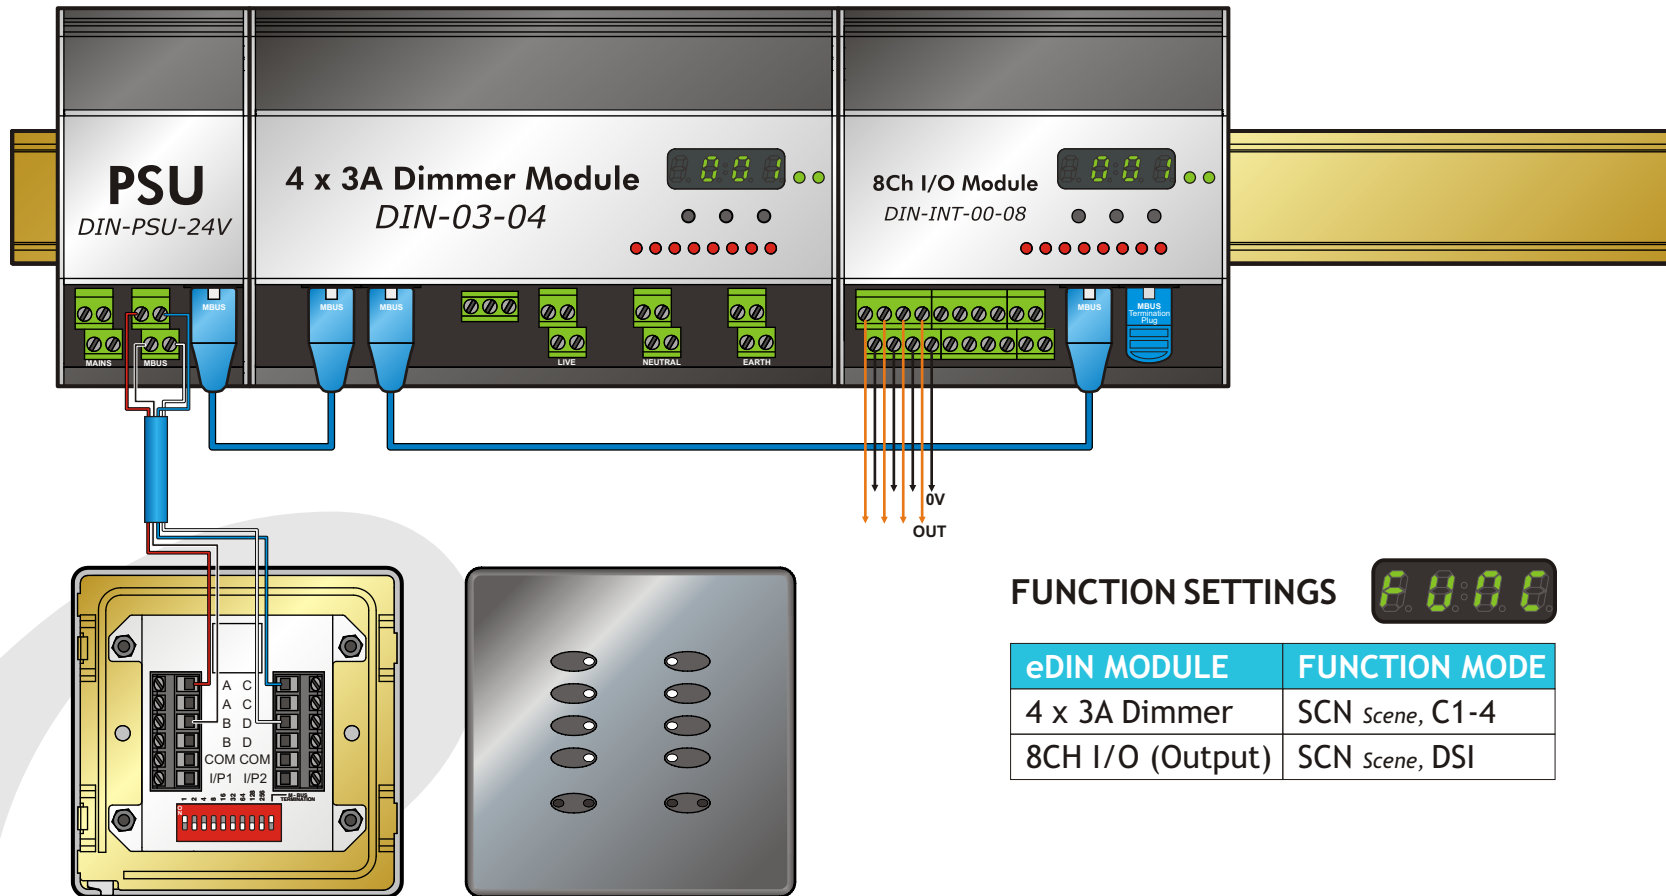

Please Note: For full electrical wiring instructions please see installation guides included with each module.

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.

19 4 x 3A with 4 x SELV 1-10V Outputs [Scene Setting]

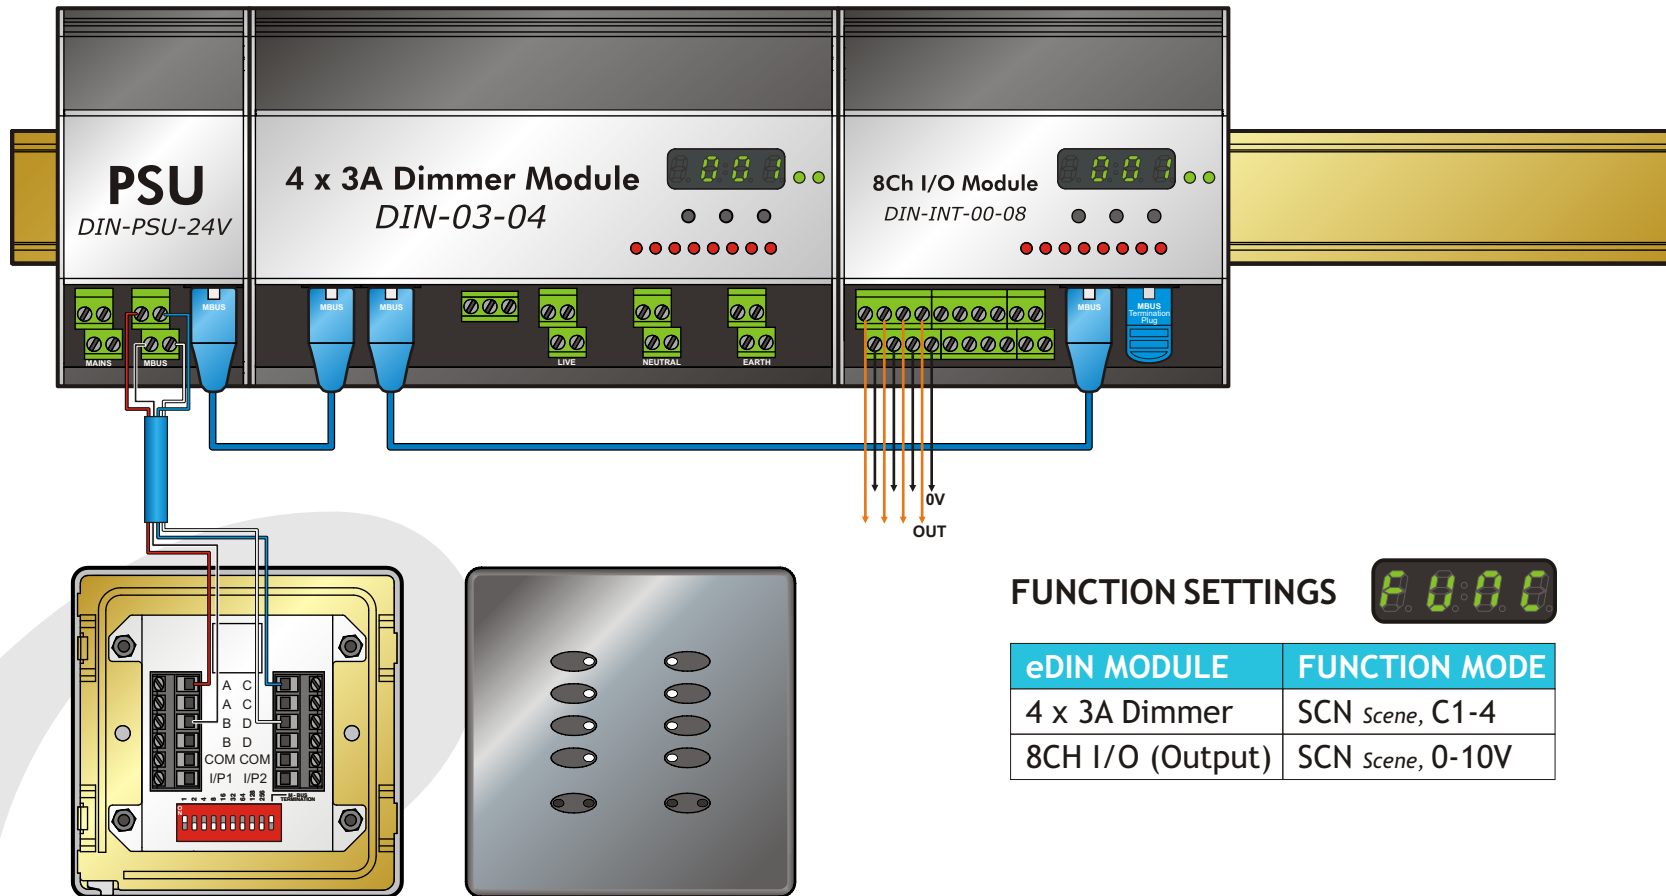

FUNCTION SETTINGS



eDIN MODULE	FUNCTION MODE
4 x 3A Dimmer	SCN <i>Scene</i> , C1-4
8CH I/O (Output)	SCN <i>Scene</i> , 0-10V

Please Note: For full electrical wiring instructions please see installation guides included with each module.

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.






Please Note: For full electrical wiring instructions please see installation guides included with each module.

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.

21

4 x 3A with 4 x SELV 1-10V with Relay Switching [Scene Setting]

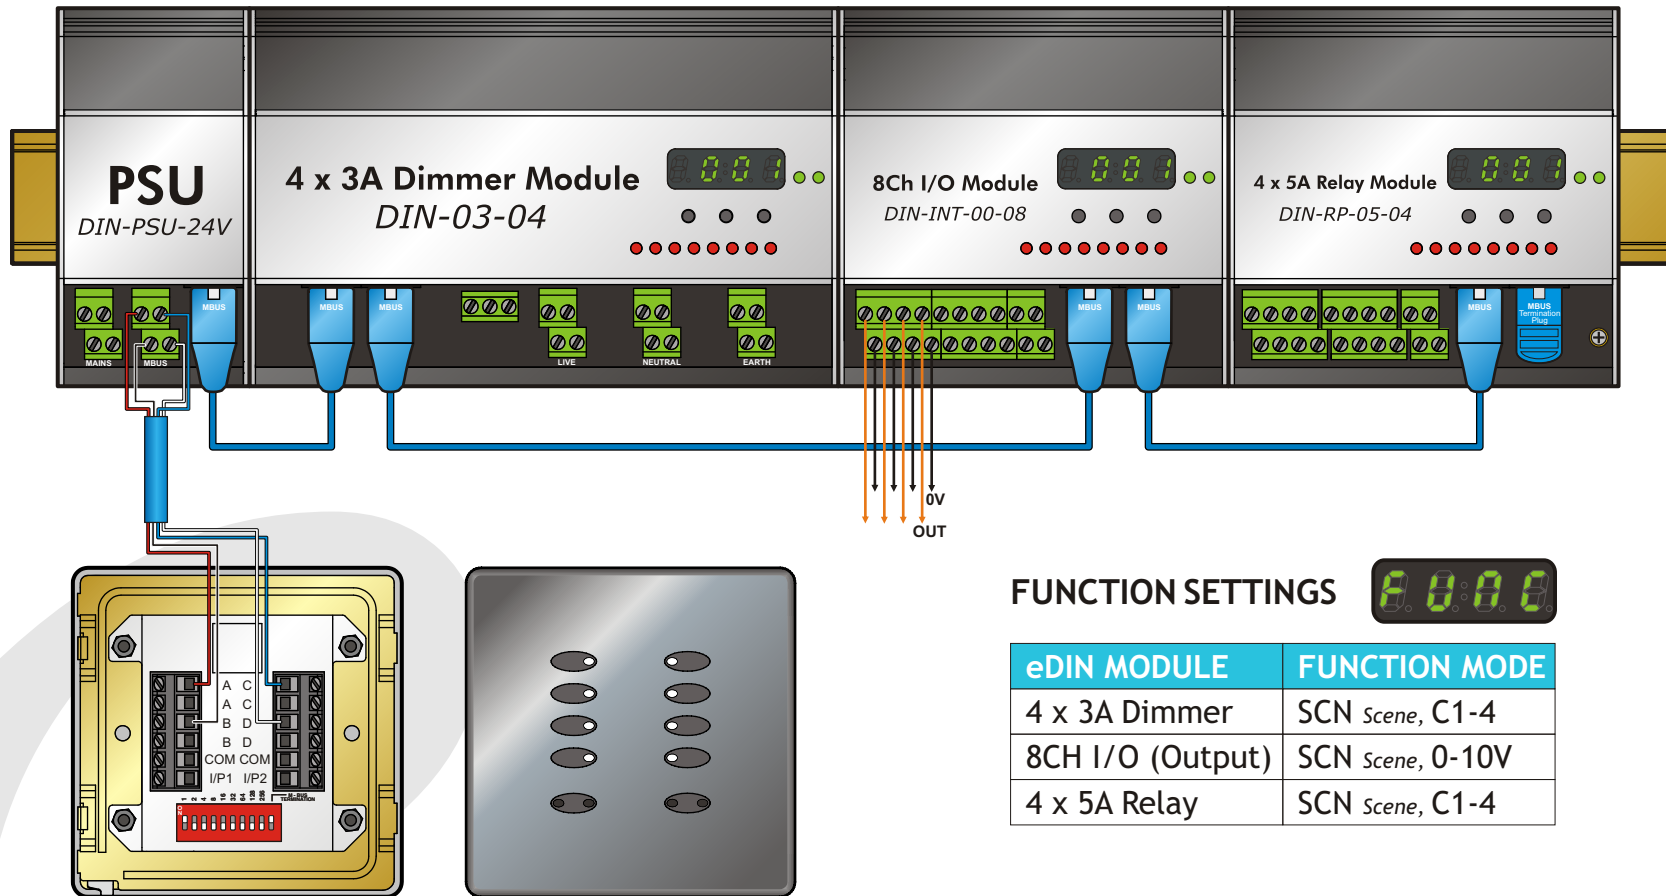

FUNCTION SETTINGS




eDIN MODULE	FUNCTION MODE
4 x 3A Dimmer	SCN Scene, C1-4
8CH I/O (Output)	SCN Scene, 0-10V
4 x 5A Relay	SCN Scene, C1-4

Please Note: For full electrical wiring instructions please see installation guides included with each module.

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.



22 8 x SELV 1-10V Outputs [Scene Setting]

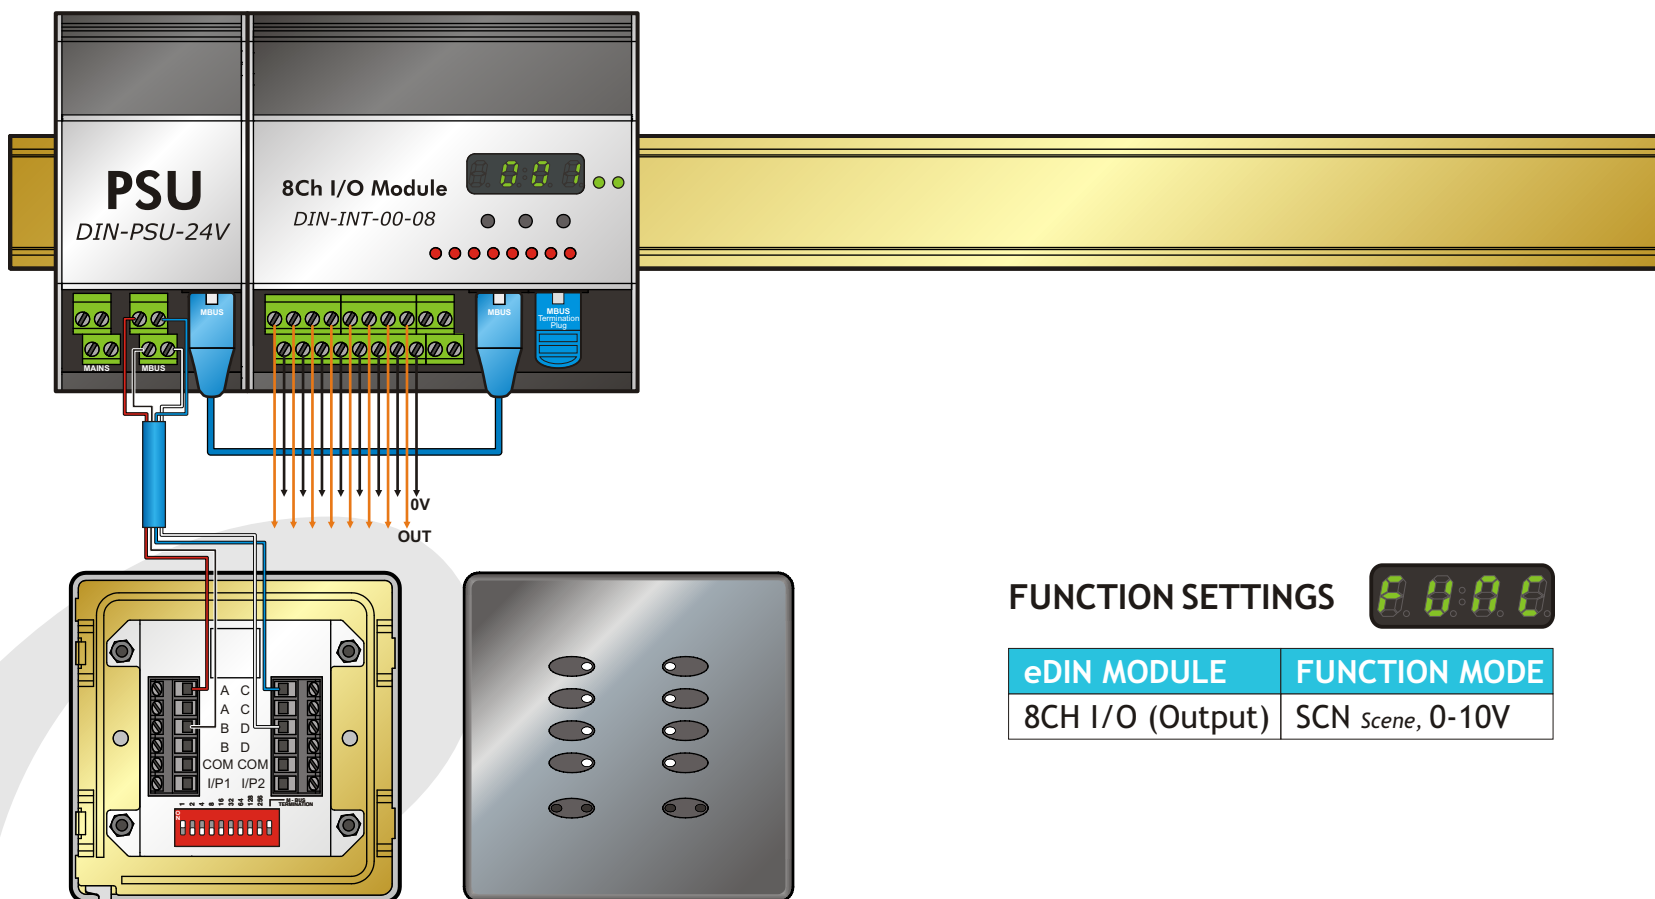

Please Note: For full electrical wiring instructions please see installation guides included with each module.

FUNCTION SETTINGS




eDIN MODULE	FUNCTION MODE
8CH I/O (Output)	SCN <i>Scene</i> , 0-10V

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.



23 8 x SELV 1-10V with Relay Switching [Scene Setting] eDIN

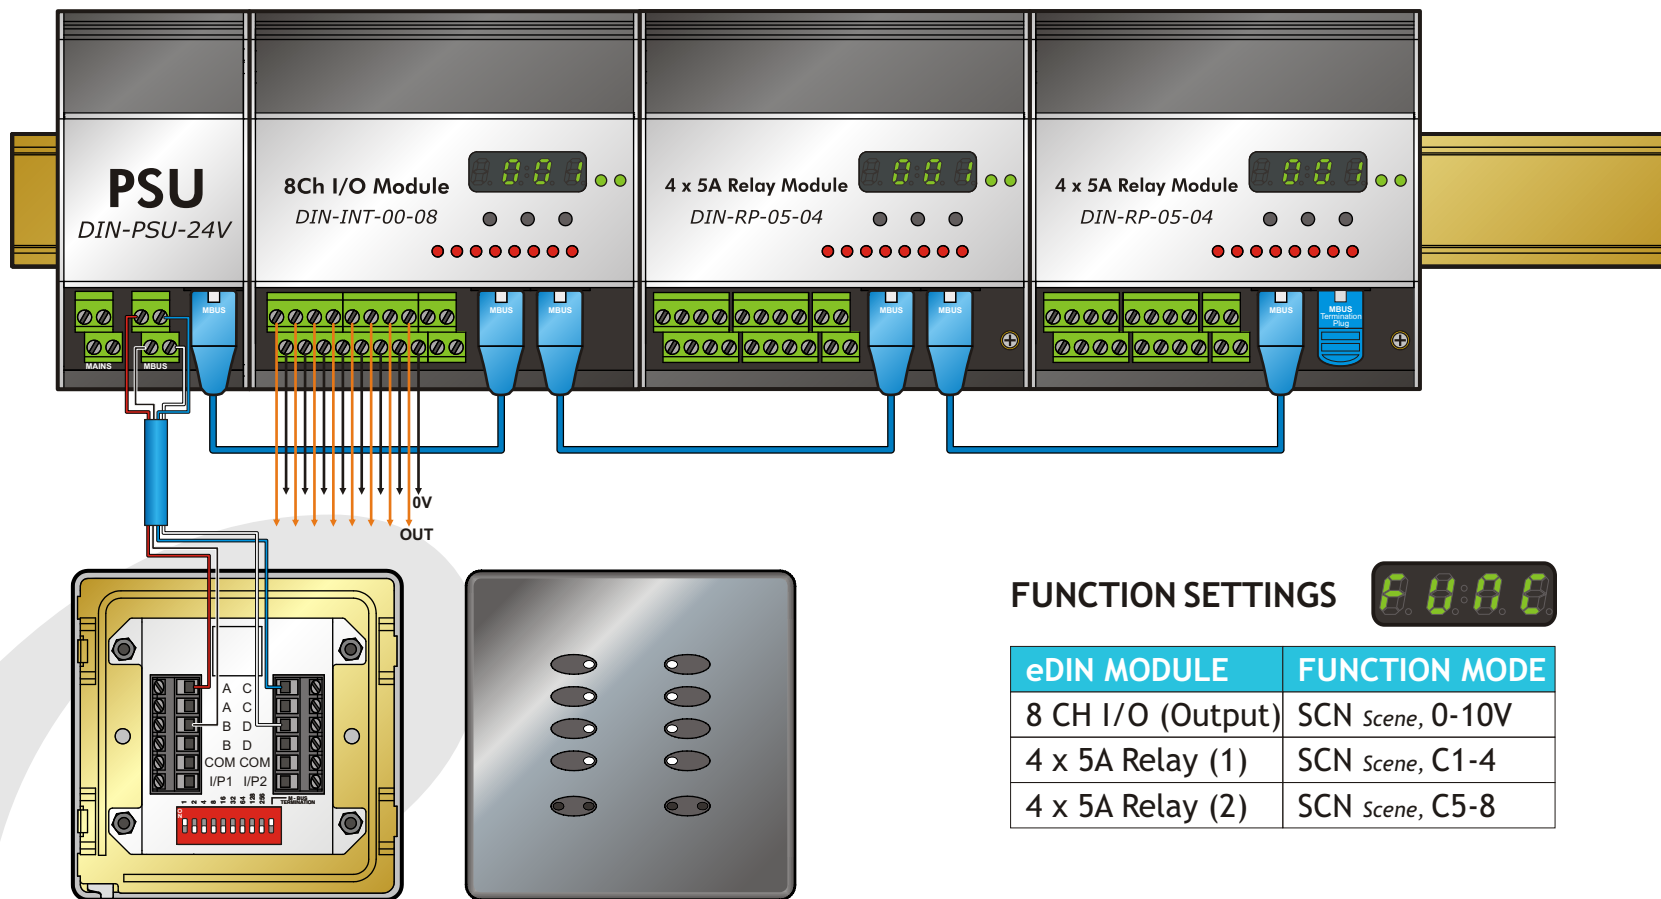

FUNCTION SETTINGS




eDIN MODULE	FUNCTION MODE
8 CH I/O (Output)	SCN Scene, 0-10V
4 x 5A Relay (1)	SCN Scene, C1-4
4 x 5A Relay (2)	SCN Scene, C5-8

Please Note: For full electrical wiring instructions please see installation guides included with each module.

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.

24 4 x SELV DSI & 4 x SELV 1-10V Outputs [Scene Setting]

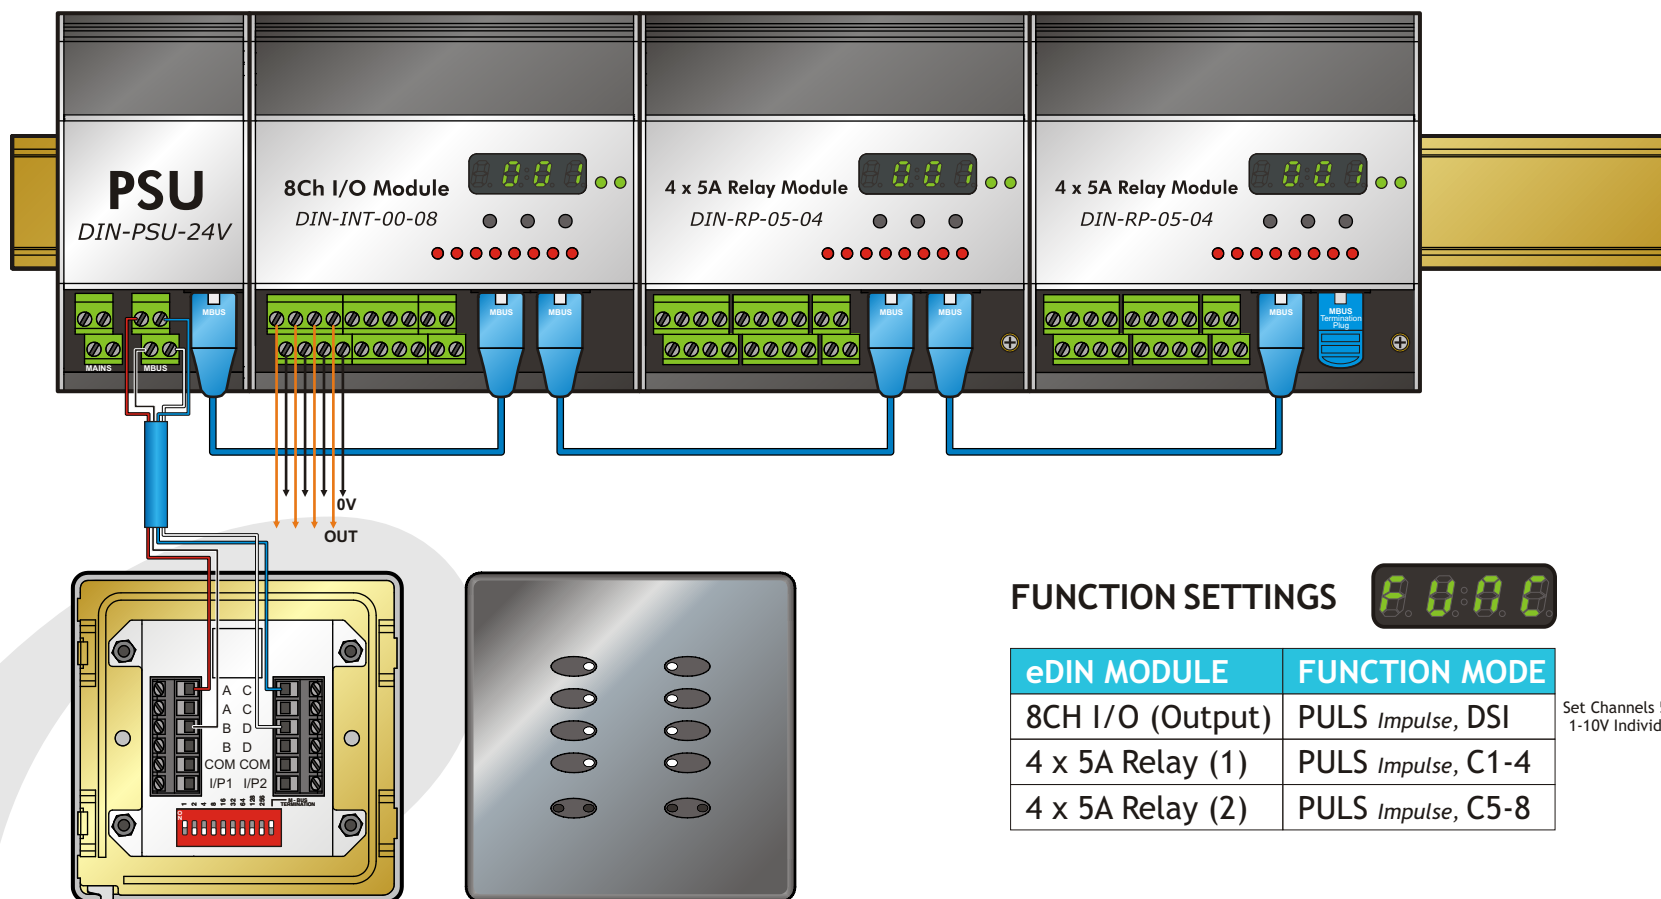


Please Note: For full electrical wiring instructions please see installation guides included with each module.

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.

25

4 x SELV DSI with 4 x SELV 1-10V and Relay Switching [Scene Setting]

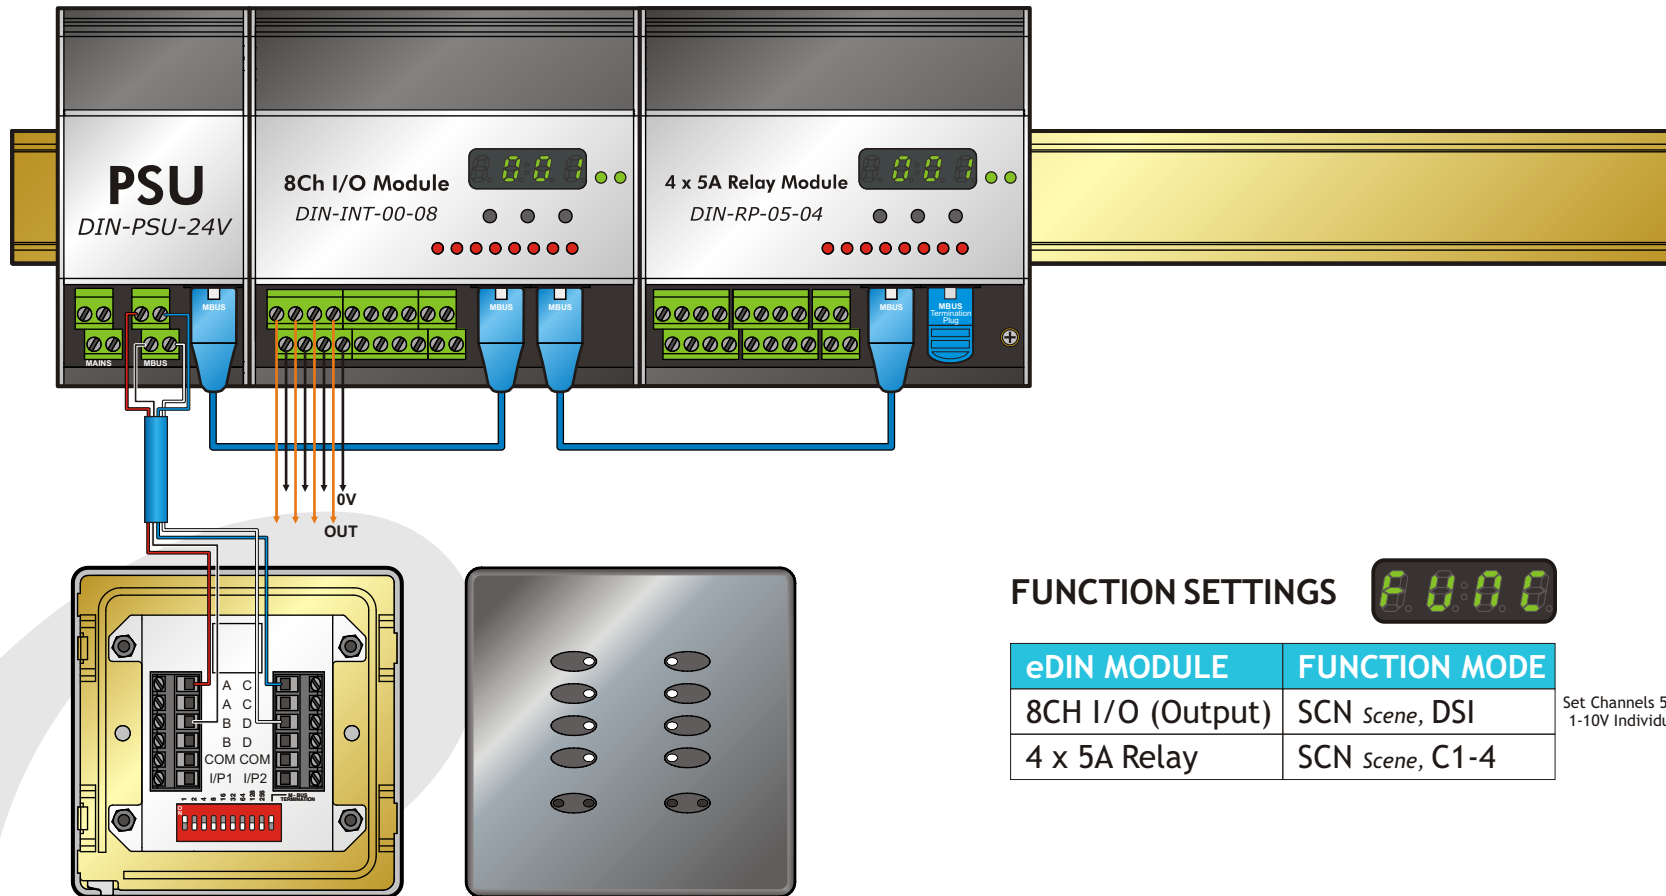

FUNCTION SETTINGS



eDIN MODULE	FUNCTION MODE
8CH I/O (Output)	SCN Scene, DSI
4 x 5A Relay	SCN Scene, C1-4


Set Channels 5-8 to 1-10V Individually

Please Note: For full electrical wiring instructions please see installation guides included with each module.

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.



26 8 x SELV DSI [Scene Setting]

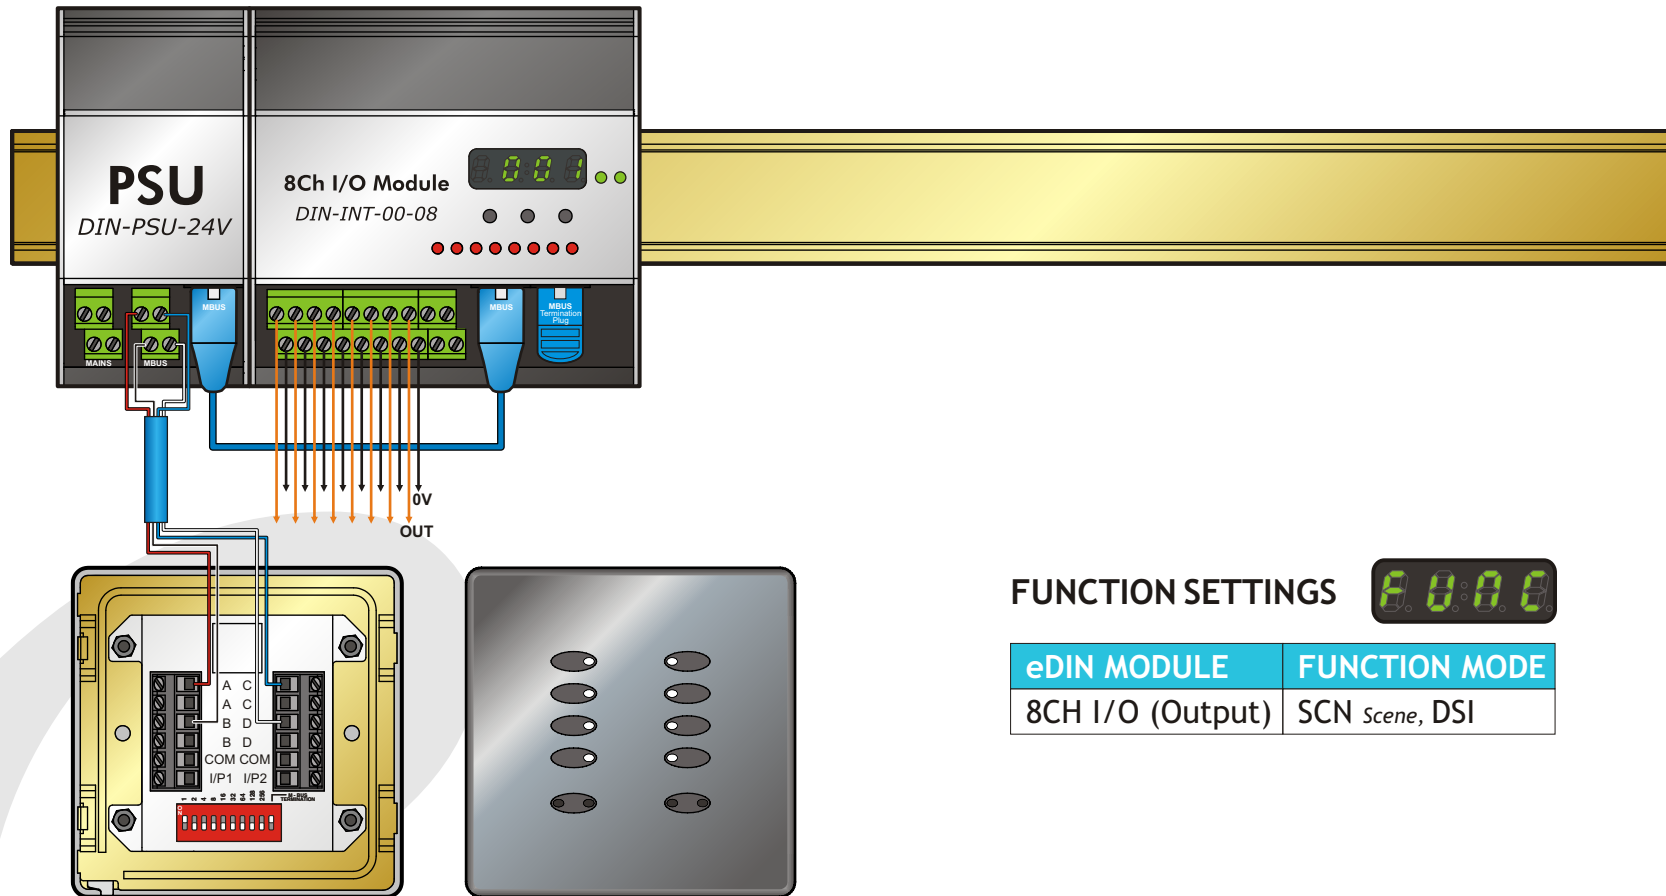

Please Note: For full electrical wiring instructions please see installation guides included with each module.

FUNCTION SETTINGS



eDIN MODULE	FUNCTION MODE
8CH I/O (Output)	SCN <i>Scene</i> , DSI

Important: Use I/O module (DIN-INT-00-08) only with SELV equipment. To control fluorescent ballasts with DALI, DSI or 1-10V use an eDIN Universal Ballast Controller Module.

